


THE REMOTE CONTROL

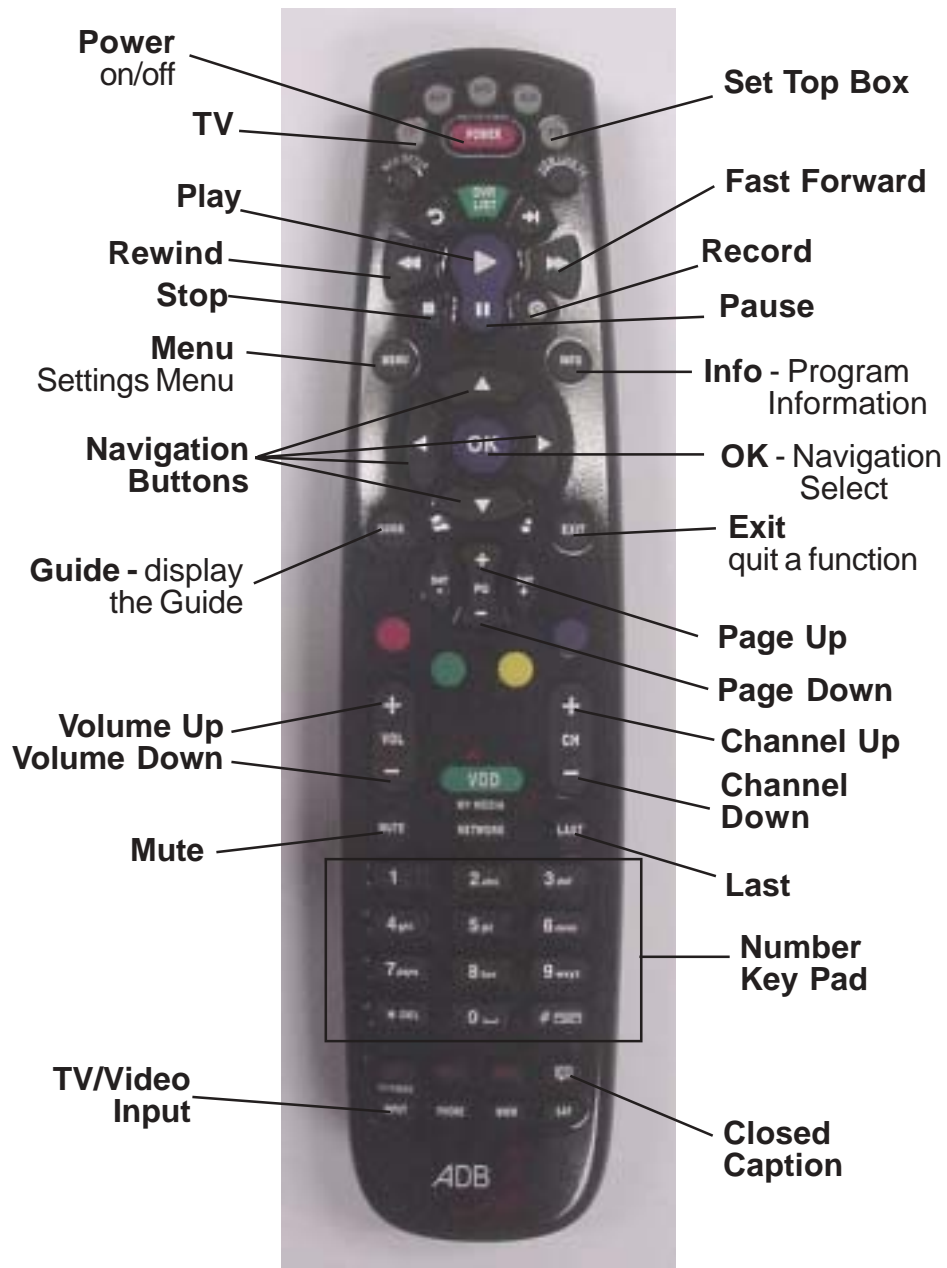

BUTTONS

Press **POWER** once to turn on or off the selected home entertainment component.

PLAY, REWIND, STOP, FAST FORWARD, RECORD and **PAUSE** are used for PVR functions.

Use the **NUMBER KEY PAD** (0-9) to directly select channels.

The **MUTE** button will shut off sound on the TV.

Use **VOL+** (or **VOL-**) to raise (or lower) the sound volume.

Use **CH +** or **-** to select the next higher (or lower) channel. In the guide these buttons will allow you to page up and down.

Use **GUIDE** to display the program guide.

Press the **MENU** button once to display settings menu.

Use **INFO** to display current channel and program information. Press a second time to see more channel detail and the next program.

Use **NAVIGATION (Arrow) KEYS** (right, left, up and down) to move the cursor in the program guide and menu screens.

Press **OK** once after entering channel numbers. (Some TV models will change after entering the channel number without the enter button.) You can also use OK to choose options and to tune programs from the program guide.

Use **EXIT** to exit out of the menu and guide or anytime you wish to quit a function.

Use **PAGE UP** or **PAGE DOWN** to scroll through menu screens and the program guide.

Press **LAST** once to recall the last channel and to page back one screen in the main menu. Pushing Last again and again will let you go back and forth between the last two channels that were viewed.

CLOSED CAPTION is for turning the closed captioning on and off. However, this does depend on the TV, channel, and programming for availability.

TV/VIDEO INPUT switches the mode between TV or Video.